

● Camera

- Tip Nikon**
 B04 CoolPix 100, 300, 600, 700, 750, 800, 900, 950, 990, 2000
 B05 CoolPix: 2100, 2200, 3100, 3200
- Olympus**
 B04 C-100, C-120, C-2000Z, C-200Z, C-2020Z, C-2030, C-2040Z, C-2100Z, C-211, C-2500L, C-3000Z, C-300Z, C-3020Z, C-3040Z, C-320L, C-4000Z, C-4040Z, C-5050Z, C-700UZ, C-720UZ, C-730UZ, C-740UZ, C-750, C-960Z, C-990Z, D-200L, D-220L, D-320L, D-340L, D-340R, D-360L, D-370L, D-380, D-400Z, D-450L, D-450Z, D-460Z, D-500L, D-550Z, D-600L, D-620L, E-10, E-100RS, E-20, E-20P
 B05 C-5000, C-50Z, C-60, Stylus 300, Stylus 400, Stylus 410
- Pentax**
 B05 OPITIO: 330, 430, 330RS, 430RS
- Sony**
 B09 DCS: P10, P100, P100/LJ, P100/R, P12, P32, P41, P52, P72, P73, P8, P92, P93, V1, W1, W1/B
- Toshiba**
 B02 PDR-M1, PDR-M11, PDR-M21, PDR-M25, PDR-M3, PDR-M4, PDR-M5, PDR-M60, PDR-M61, PDR-M65, PDR-M70, PDR-M71, PDR-M81

Tip Motorola
 A32 M500

Tip Apple
 B01 iPod
Dell
 B07 Digital Jukebox

Tip Nintendo
 A13 Gameboy SP

● MP3

● MP3

● Other



itips

Device Compatibility Guide

for Handhelds/PDAs,
 Mobile Phones,
 Digital Cameras,
 MP3s & Others

Verify adapter compatibility by simply matching the tip's color code to one of the color codes on any itips compatible adapter.

To find tips for other devices or other compatible products, please visit www.igo.com.

iGo™
 MOBILITY ELECTRONICS, INC.
www.igo.com

Mobile Phone

Tip Audiovox

- A00 Series: CDM-8400, CDM-8410, CDM-8450, CDM-8900, CDM-9900, CDM-9950
- A07 Series: CDM-130, CDM-135, CDM-135XL, CDM-8100, CDM-8150T, CDM-8150X, CDM-8200, CDM-8300, CDM-8500, CDM-8600, PCX1100XL
- Kyocera**
- A00 1100 Series, 2100 Series, 2200 Series, 3000 Series, 3200 Series, 7100 Series, BLADE Series, PHANTOM Series, QCP-2027, QCP-2035, QCP-2035A, RAVE Series
- A18 Slider: SE44, SE47
- LG**
- A06 4010, 4011, 4050, 4500, 4600
- A17 1010, 1100, 2110, 3100, 4400, 5200, 5250, 5350, 4NE1, TM510, V111, VX1, VX10, VX2000
- Motorola**
- A00 G520
- A10 Timeport 280, Timeport 270c, C331 w/ antenna, C333 w/ antenna, 388C, A835, C332, C343, C343c, C353, E380, V.120 Series, V.60 Series, V.70 Series, V200 Series, V300 Series, V400 Series, V500 Series, V600 Series, V710 Series
- A32 A70, A780, M300; RAZR V3
- Nextel**
- A00 i500, i550, i700
- A10 i30sx, i35s, i50sx, i530, i55sr, i55sx, i58sr, i80s, i85s, i88s, i90c, i90c SE, i95cl, lm1000
- Nokia**
- A01 Series: N-Gage Game Book, 640, 650, 1100, 1260, 2260, 3100, 3200, 3300, 3400, 3500, 3600, 5100, 5200, 5300, 5500, 6000, 6200, 6300, 6500, 6600, 6610, 6800, 7200, 7600, 8200, 8300, 8800, 8900, 9200
- Samsung**
- A00 A460, A500, A600, A620, A660, A680, N240, N270 Matrix Phone, N400, X105
- A03 A310, A530, E105, E715, N150, N370, N625, N626, N635, R225, R225M, S307, V205, V206, X425, X426, X427
- Sanyo**
- A00 Sprint Models: 5500, RL2000, RL2500, RL-4920, SCP-7300, SCP-8100, SCP-8200, VGA1000, VM4500
- A02 4300, 4920, 5300, 5400, 5500, 7200, 7300, 8100, 8200
- Siemens**
- A08 A55, A56, A60, C55, C56, C60, C62, M55, MC60, S55, SL55, SX1
- Sony Ericsson**
- A09 2600, A2218z, K700i, P800, P900, R300, R380 World, S700i, T100, T200, T206, T226, T230, T237, T28 World, T28z, T300, T306, T310, T316, T39, T39m, T60, T606, T608, T60i, T61, T610, T616, T61c, T61d, T61LX, T61z, T62U, T630, T637, T68, T68i, T68m, Z200, Z500a, Z600

HandHeld/PDA

Tip Audiovox

- A22 2032SP, Maestro, Thera
- Casio**
- A22 BE-300, BE-300AMX, BE-300LT, BE-300PV, E-125, E125CSC, EG-800STD, EG-800STD-S, EM500BV, EM500GN, EM500RD, EM500SB, EM500YW
- HP/Compaq**
- A20 Series: Pocket PC 1900, Pocket PC 2200, iPAQ 3800, iPAQ 3900, iPAQ 4100, iPAQ 4300, iPAQ 5400, iPAQ 5500
- A22 iPAQ: 3100, 3600, 3700
- PalmOne/Handspring**
- A00 Tungsten E, Zire 31, Zire 72
- A19 Tungsten C, Tungsten T, Tungsten T2, Tungsten T3, Tungsten W, Zire 71, i705, M125, M130, M500, M505, M515
- A26 Treo 90, Treo 180, Treo 270, Treo 300, Treo 600
- Rim**
- A29 Blackberry: 6210, 6230, 6280, 6510, 7210, 7230, 7280, 7510
- Sony**
- A23 Series: Clie NR, Clie NX, Clie NZ, Clie SJ, Clie SL, Clie T, Clie TG, Clie TJ, Clie TH
- Toshiba**
- A22 E310, E330, E335, E350, E355, E570, E740, E750, E755, Genio E550g

HandHeld/PDA

Dell

- B07 Axim: X3, X5

Camera

Tip Canon

- B05 A10, A20, A30, A40, A60, A70, A80
- Casio**
- B03 QV-10, QV-10R, QV-2000+, QV-2000UX, QV-2300UX, QV-2300UX +, QV-2400UX, QV-2800UX, QV-2900, QV-3000+, QV-3000EX, QV-3500, QV-4000, QV-5000SX, QV-5500SX, QV-70, QV-700, QV-7000SX, QV-770, QV-780, QV-8000SX
- Fuji**
- B02 FinePix: 501, 1300, 2300, 2900, 3800, 1400Z, 2400Z, 2700Z, 2800Z, 4800Z, 4900Z, 6800Z, 6900Z, DX-10, F401, F402, F601, F700, M603, MX-1200, MX-1400, MX-1500, MX-1700Z, MX-2700, MX-2900Z, MX-500, MX-600Z, MX-700, S3000, S304, S5000, S602, S7000
- HP**
- B03 PhotoSmart: 120, 230, 315, 318, 320, 612, 620, 715, 720, 850
- Kodak**
- B02 DC4800, DX6490, DX7440, DX7630, LS443, LS633, LS743, LS753
- B04 Camera Dock II, DC120, DC200, DC200+, DC210, DC210+, DC215, DC220, DC240i, DC265, DC280, DC290, DC3200, DC3400, DC40, DC5000